


Bottom

← 420mm →

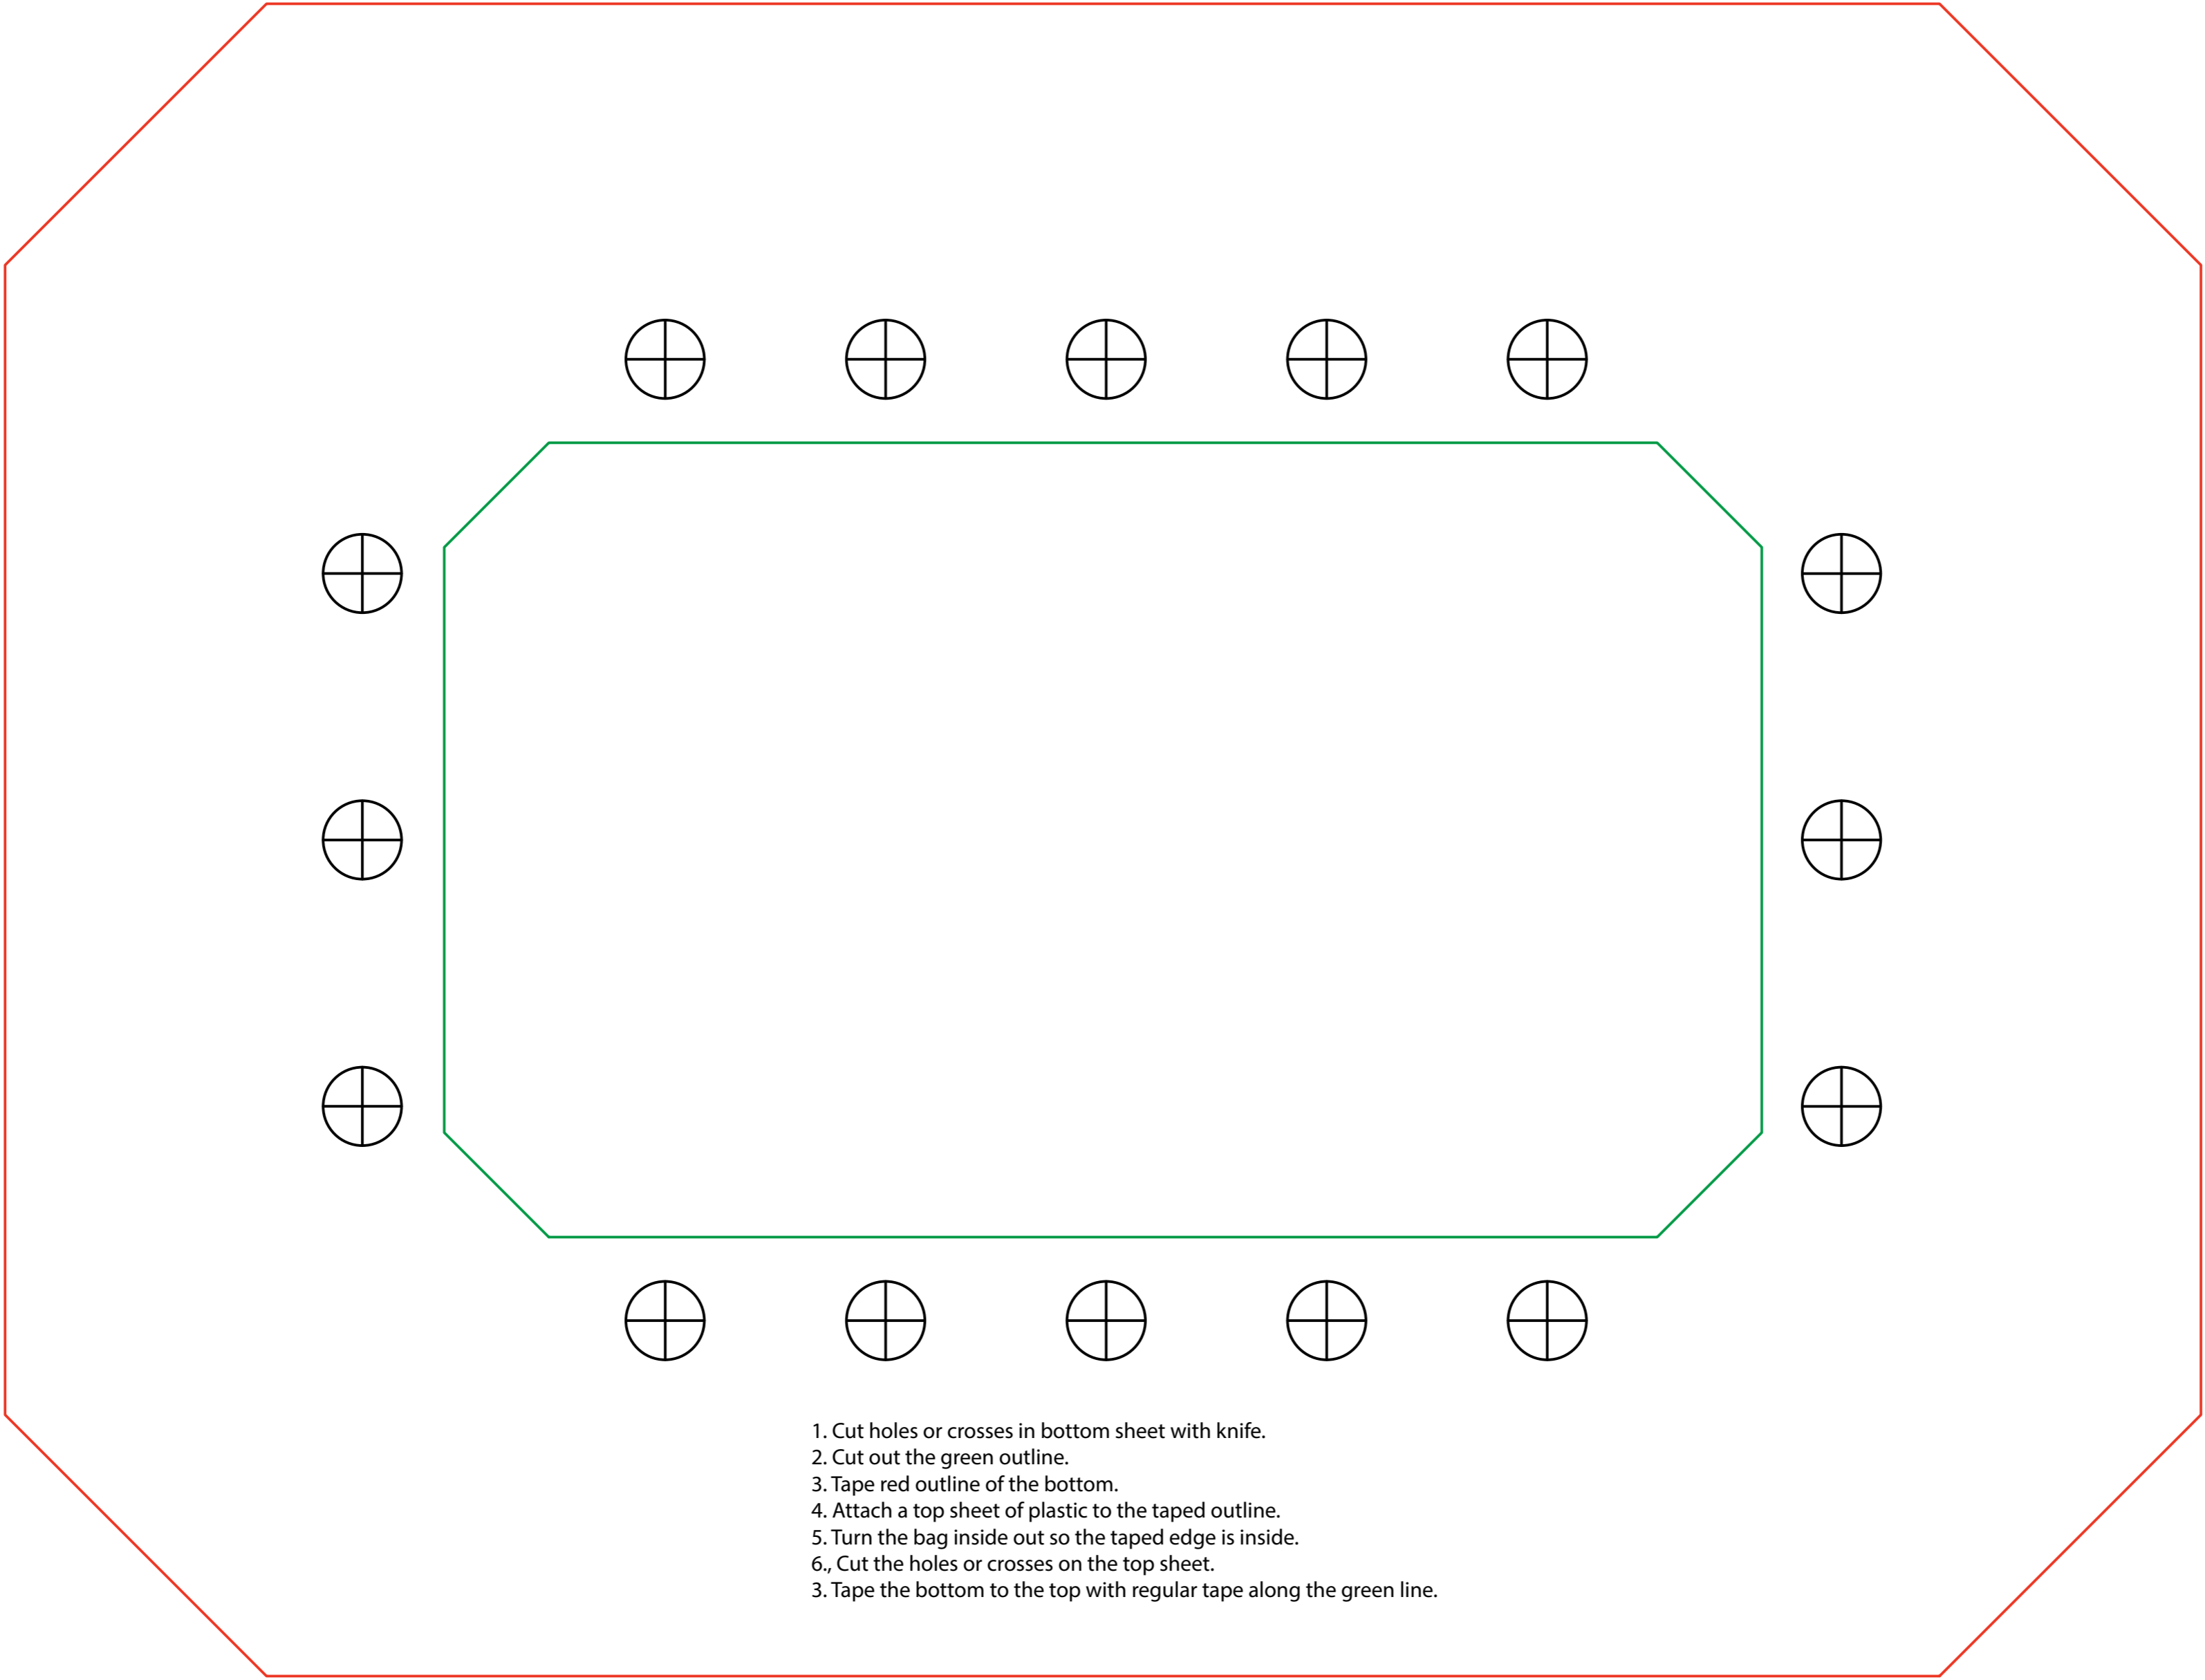

1. Cut holes or crosses in bottom sheet with knife.
2. Cut out the green outline.
3. Tape red outline of the bottom.
4. Attach a top sheet of plastic to the taped outline.
5. Turn the bag inside out so the taped edge is inside.
- 6., Cut the holes or crosses on the top sheet.
3. Tape the bottom to the top with regular tape along the green line.

Top

