


Bottom

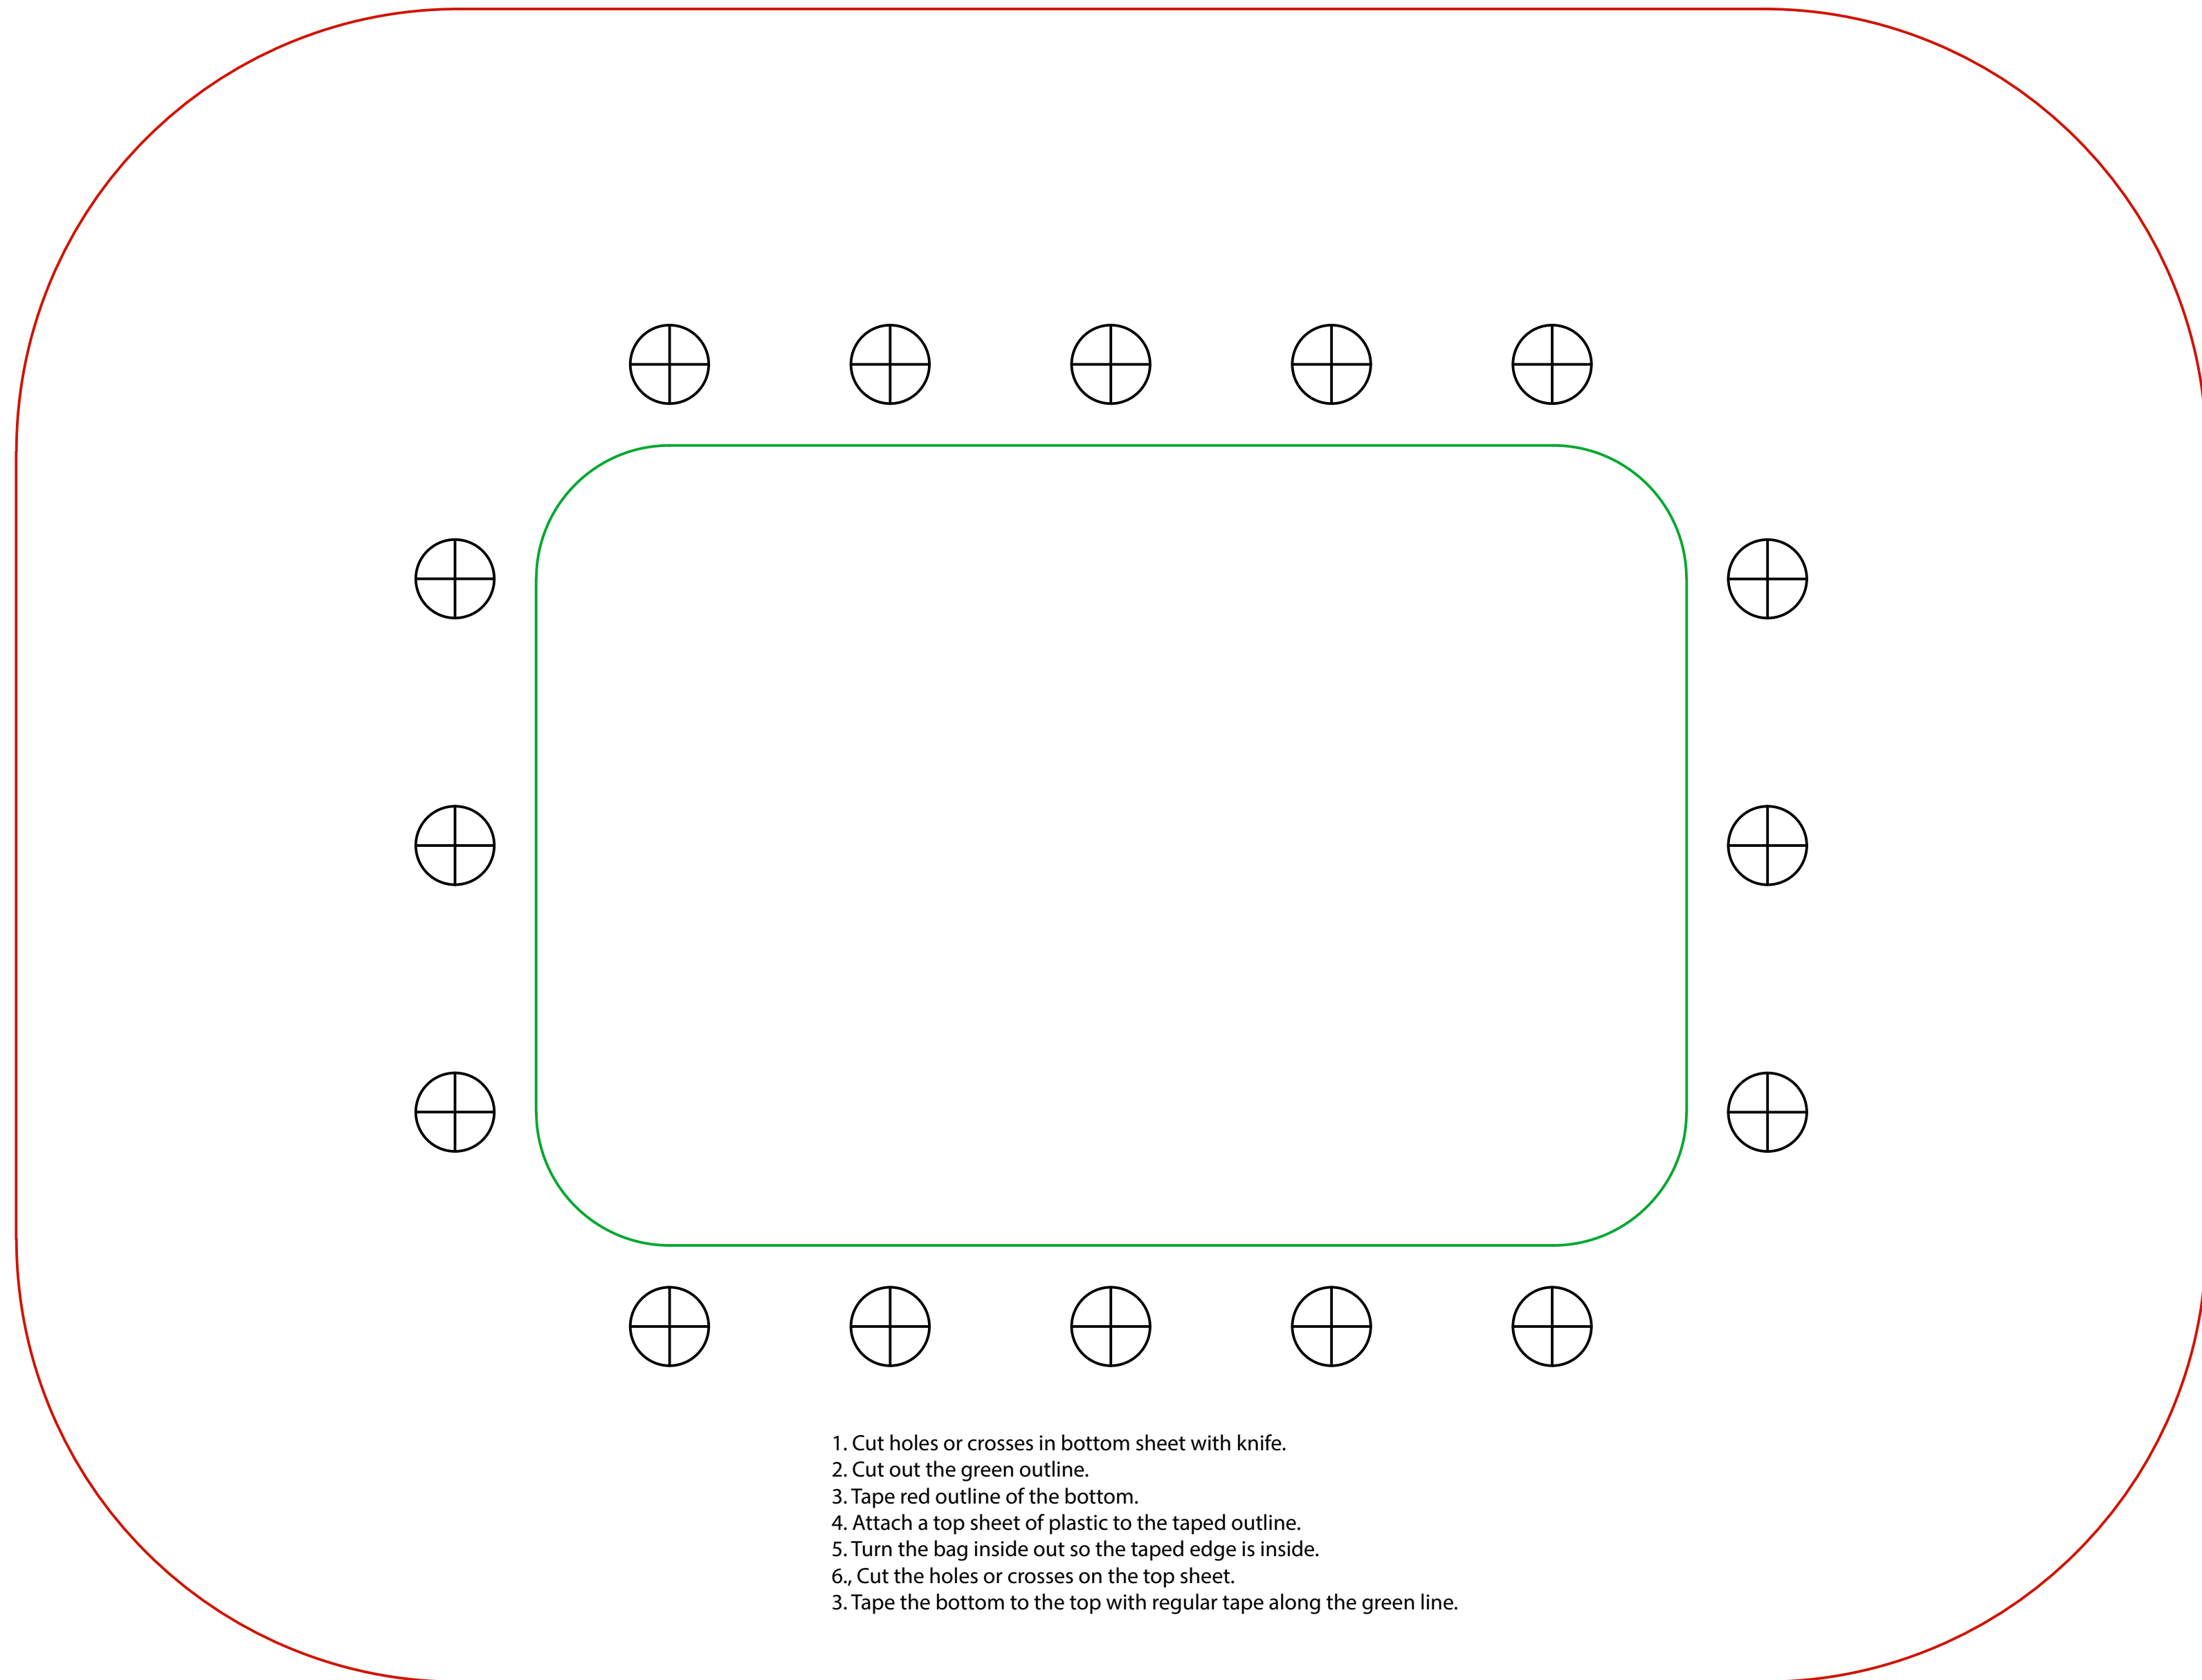

1. Cut holes or crosses in bottom sheet with knife.
2. Cut out the green outline.
3. Tape red outline of the bottom.
4. Attach a top sheet of plastic to the taped outline.
5. Turn the bag inside out so the taped edge is inside.
6. Cut the holes or crosses on the top sheet.
3. Tape the bottom to the top with regular tape along the green line.

Top

